


755HA5L
Heat Alarm, Surface, 220-240V a.c., Lithium Battery


Scan the QR code to view the installation instructions online




Package Content

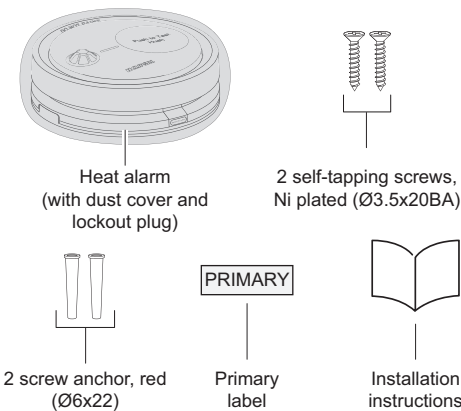


Operating elements

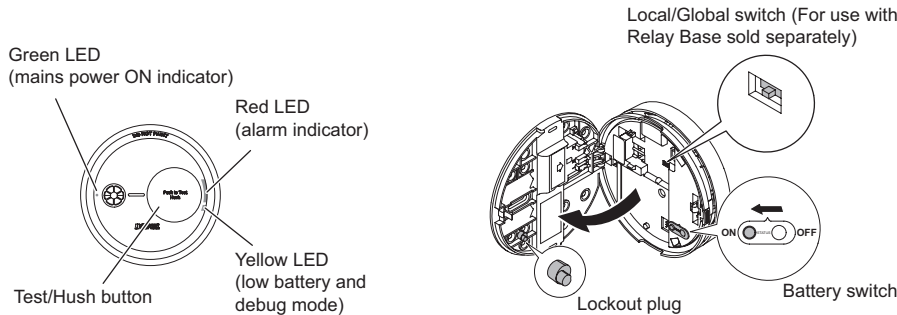


Installation location

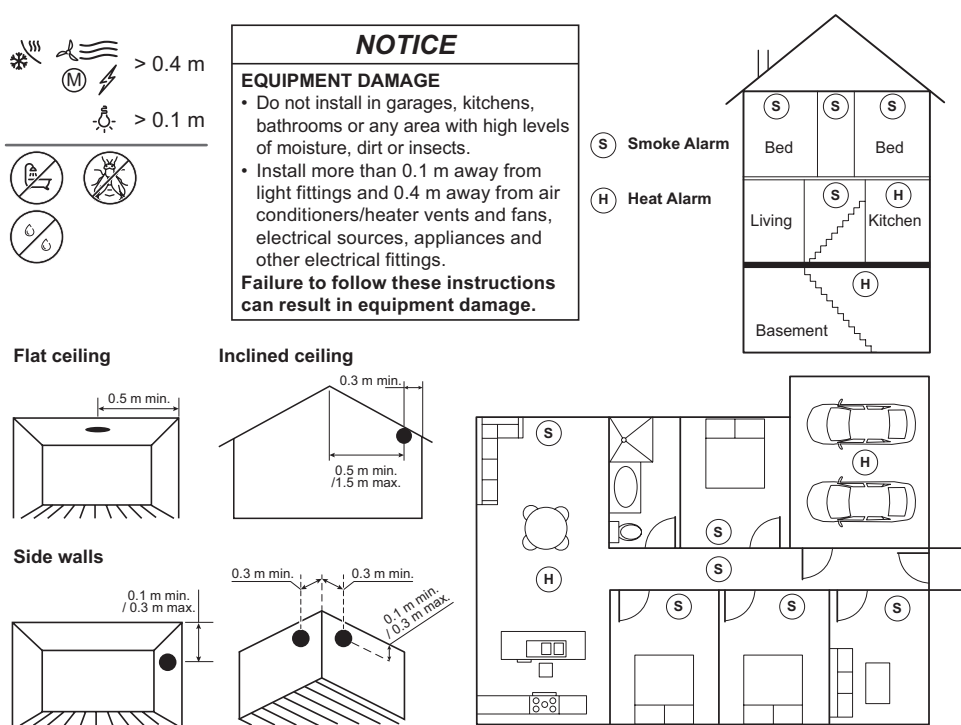

Setup wireless connection

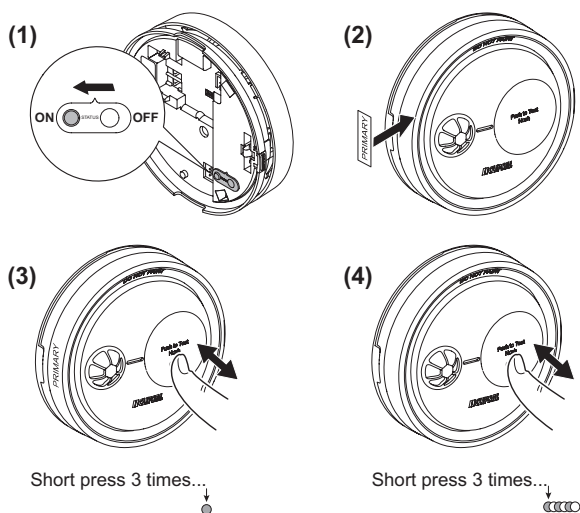

Installing the device

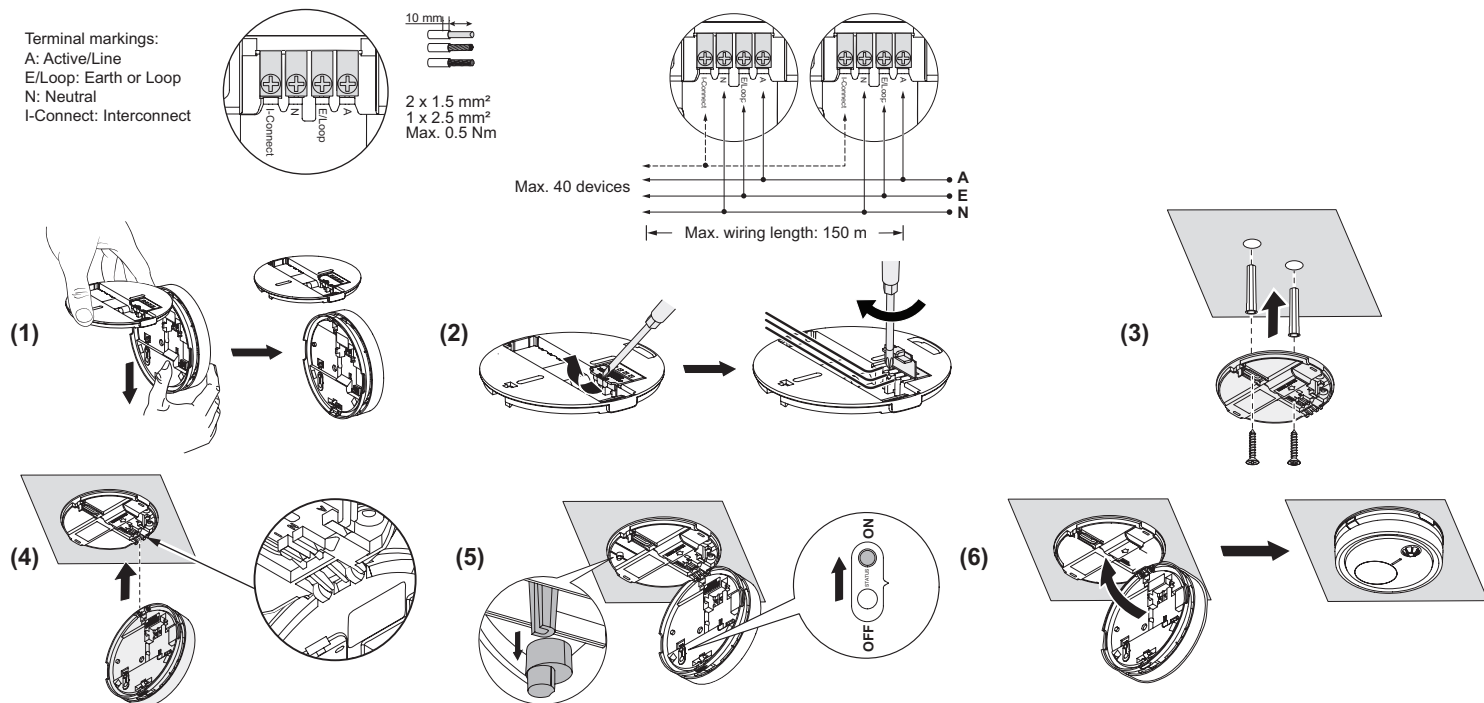

Heat Alarm, Surface, 220-240V a.c., Lithium Battery

⚠ ⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- This product must be installed and serviced by appropriately qualified and/or licenced electrical personnel.
- After installation this product must not be modified in any way.
- Isolate the electrical supply before doing any work on this product.
- Ensure that the product has been correctly installed and tested for safe operation before re-energising the electrical supply.

Failure to follow these instructions will result in death or serious injury.

NOTICE

EQUIPMENT INSTALLATION HAZARD

- Always operate the product in compliance with the specified technical data.
- Keep the installation instruction for the life of the product.

Failure to follow these instructions can result in equipment damage.

⚠ WARNING

SEALED BATTERY HAZARD

Do not recharge, disassemble or incinerate the battery.

Failure to follow these instructions can result in death, serious injury or equipment damage.

Operating elements

IMPORTANT: During installation, the lockout plug must be removed and the battery switch must be set to the ON position. The unit cannot be closed onto the base until the lockout plug is removed.

Installation location

Note: The smoke alarm must be installed in accordance with the National Construction Code and any local state legislation requirements.

Setup wireless connection

1. Turn the battery switch to **ON** position.
2. Identify a device and mark it as **PRIMARY** with the label supplied. Other devices are considered as Secondary.
3. Short press the Test/Hush button 3 times on the primary device. The red LED turns on for 30 s once it is in pairing mode.
4. Identify a secondary device and short press the Test/Hush button 3 times. The red LED blinks 3 times on both primary and secondary devices indicating successful RF connection. Then on the primary device the red LED again turns on for 30 s.

Repeat step 4 on all secondary devices.

⚠ WARNING

EQUIPMENT FUNCTIONING HAZARD

- Do not mount the heat alarm on the RF base (755RFB and 755RFB2), as this may result in damage to the heat alarm.
- Avoid hardwiring the interconnect between two RF devices, as this may lead to signal interference and prevent a third alarm from triggering correctly.
- If a hardwired interconnect between two RF devices is necessary, ensure both devices are set to Local mode to avoid a signal interference.

Failure to follow these instructions can result in death, serious injury or equipment damage.

TIP: To exit from pairing mode, short press the Test/Hush button 3 times on the Primary device. The red LED turns off indicating that the Primary device is not in pairing mode.

Installing the device

⚠ ⚠ DANGER

HAZARD OF ELECTRIC SHOCK

- Ensure that the terminal connection area does not come in contact with the metallic parts of any device installed in the same location.
- Isolate the mains power supply before installing the device.

Failure to follow these instructions will result in death or serious injury.

⚠ WARNING

INCORRECT WIRING HAZARD

- All interconnected smoke alarms and heat alarms must be supplied from the same circuit.
- A common Neutral must be used for the Interconnect to operate.
- Max 40 smoke alarms and heat alarms can be interconnected.
- DO NOT use non-pure sinusoidal power sources (e.g. power derived from square-wave invertors).


Failure to follow these instructions can result in death, serious injury or equipment damage.

1. Unclip the device from the mounting base to access the wiring terminals.
2. Use a screwdriver to open the terminal cover, then connect the wires as shown in the wiring diagram.
3. Secure the mounting base on the wall or ceiling.
4. Clip the device back onto the mounting base.
5. Remove the lockout plug, set the battery switch to **ON** position, and keep the Local/Global switch to Global.
6. Gently press the device to ensure that it locks into the mounting base.


Note: After installation, turn on the power supply. The green LED indicates that the device is powered by the mains power

Compatibility with other CLIPSAL Smoke Alarms

Wired connection

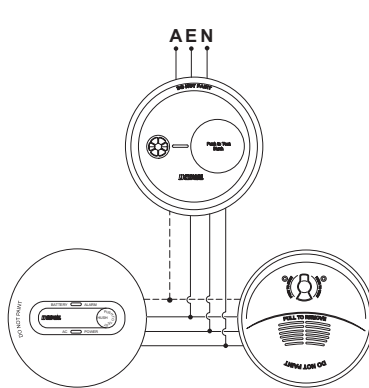

Wireless connection

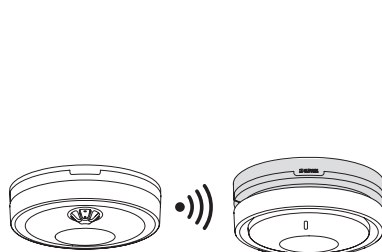

⚠ WARNING

EQUIPMENT NON-FUNCTIONAL HAZARD

Remove the dust cover before using the heat alarm to ensure it functions properly.

Failure to follow these instructions can result in death, serious injury or equipment damage.

NOTICE

EQUIPMENT CONTAMINATION

Do not remove the dust cover until all construction work is completed. Construction dust and chemicals causes malfunction and false alarms.

Failure to follow these instructions can result in equipment damage.

The heat alarm is only compatible with CLIPSAL smoke alarms and its accessories.

Compatible devices for Wire connection: 755HA5L, 755PSMA5, 755PSMA5L, 755RB/5, 755PSMA2/4, 755RLPSMA2/4, 755PFM4, CLP599WSA, 755WSA and 756

Compatible devices for Wireless connection: 755HA5L, 755LPSMA4, 755RFB2, CLP599WSAL, CLP599WSA, and 755WSA.

755PSMA4/755RLPSMA4 and 755PSMA5/755PSMA5L are compatible when mounted on the RF base (755RFB2).

IMPORTANT:


- A common neutral must be used on all wired devices.
- No additional configuration is needed if all devices are wired together in a group.
- 755HA5L is not mechanically compatible with wireless Smoke Alarm bases (755RFB and 755RFB2). The 755HA5L has built-in wireless functionality by default.
- For wireless connection and combination of Wired and Wireless Connection, refer to the installation instructions of 755HA5L, 755LPSMA4, 755RFB2, CLP599WSAL, CLP599WSA and 755WSA.

Operating the Heat alarms


Testing a heat alarm



Testing wired heat alarms

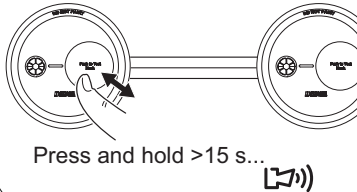

Testing wireless heat alarms

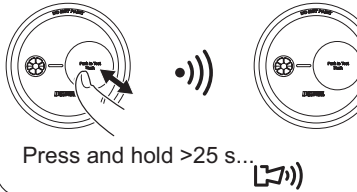

⚠ WARNING

DO NOT USE OPEN FLAME

Do not use an open flame of any type to test a device.


Failure to follow these instructions can result in death, serious injury or equipment damage.

Testing a heat alarm:


IMPORTANT: Test the heat alarm once in a month to ensure proper operation.

Press and hold the Test/Hush button for more than 3 s until an alarm sounds. If the test alarm does not sound, then the device may not be connected to power supply.

Silencing the heat alarm

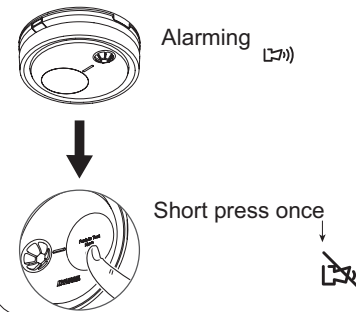

Snoozing alerts

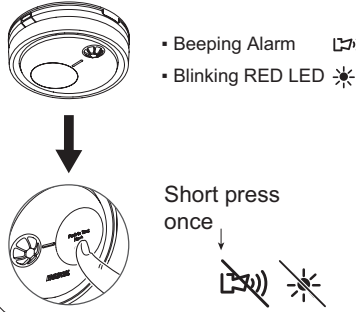

Testing wired alarms:

- Select any wired device and press and hold the Test/Hush button for more than 15 seconds.
- All wired devices should sound an alarm. If no alarm is triggered across the network, check the wired connection setup and ensure all devices are within the specified range.

Testing wireless heat alarms:

- Select any wireless device and press and hold the Test/Hush button for more than 25 seconds.
- All wireless devices should sound an alarm. If no alarm is triggered across the network, check the wireless connection setup and ensure all devices are within the specified range.

Note: Once triggered, the alarm sound across the interconnected devices will continue for a few seconds even after releasing the Test/Hush button.

Silencing the heat alarm:

» Hush feature

During an alarm event, identify the heat alarm(s) with blinking red LEDs. Short press the Test/Hush button on the alarming device to silence the alarm. The alarm sound on all devices should stop within 5 - 10 seconds.

Note: During the hush time, the red LED blinks once every 8 s.

Snoozing alerts:

» Low battery

When the battery is low, the yellow LED blinks together with a single beep sounds every 40 seconds. Short press the Test/Hush button to snooze the alert for 10 hours.

⚠ WARNING

LOW BATTERY ALERT

The device must be replaced by a licensed electrician within 30 days of the first low battery alert.

Failure to follow these instructions can result in death, serious injury or equipment damage.

» Debug mode

If a fault is detected, the yellow LED blinks twice together with two beeps sound every 48 seconds. Short press the Test/Hush button to snooze the alert for 10 hour. The device must be replaced by a licensed electrician as soon as possible.


» Alarm memory

In an interconnected group, when a device in the group is triggered by heat. The red LED blinks every 2 seconds for 72 hours after the alarm or hush mode. This helps identify the triggered device.


Short press the Test/Hush button once to snooze the blinking LED for 10 hours.

Disable wireless connection

(1)

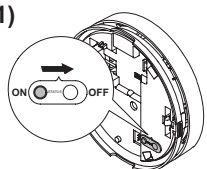


(2)

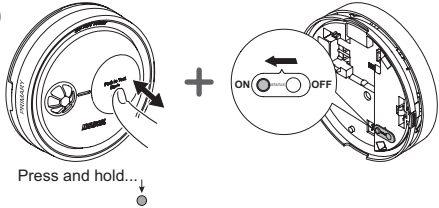

(3)



(4)

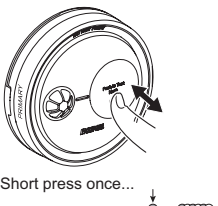

IMPORTANT: To disable the wireless connection, it is recommended to unclip the device from its mounting base. While the device is mounted on a ceiling or wall, it is not possible to press the Test/Hush button and operate the power switch simultaneously.

- Turn the battery switch to **OFF** position.
- Press and hold the Test/Hush button while simultaneously turn the power switch to **ON** position. The red LED turns on for a few seconds.
- Continue holding the Test/Hush button until the red LED turns off, release the Test/Hush button.
- When the red LED lights turns on again, short press the Test/Hush button once. The red LED blinks a few seconds, then the RF connection will be disconnected.

Standby LED and alarming sound indications

Operating mode	LED Indication	Sound	Duration
Normal mode / Standby mode	Red Blinks every 40 s	OFF	—
ALARM MODE	One device RED LED blinks 3 times every 4 s	Continuous 3 beeps every 4 s	Until air temperature is below threshold or the device is hushed
	Interconnected device OFF	Continuous 3 beeps every 4 s	Until air temperature is below threshold or the device is hushed
TEST MODE	One device RED LED blinks 3 times every 4 s	Continuous 3 beeps every 4 s	Until Test/Hush button released
	Interconnected device OFF	Continuous 3 beeps every 4 s	Few seconds after Test/Hush button is released
Hush mode	Red LED blinks every 8 s	Off	10 minutes
Low battery mode	Yellow LED blinks every 40 s	1 beep every 40 s	End of life: The device must be replaced by a licensed electrician.
Debug mode	Yellow LED blinks twice every 40 s	2 beeps every 40 s	—
Mains power On	Green LED	OFF	—
Alarm memory mode	Red LED blinks every 8 s	OFF	72 hours
SNOOZE MODE	Low battery	Yellow LED blinks every 24 s	OFF 10 hours
	Debug	Yellow LED blinks twice every 24 s	OFF 10 hours
	Alarm memory	Red LED blinks once every 40 s	OFF 10 hours

Troubleshooting	
Problem	Resolution/Action
Alarm sounds and the red LED is blinking rapidly	Heat has activated the device. Vacate the building immediately and call the Fire and Emergency Services.
Alarm sounds but the red LED is OFF	Heat has activated an interconnected alarm, located somewhere else in the building. Vacate the building immediately and call the Fire and Emergency Services.
Heat alarm is sounding, it stops when Test/Hush is pressed	Hush or silence feature has been activated for 10 minutes, unless the temperature increases. Ensure you are safe and have put out the source of the high temperature.
Red LED blinks every 2 seconds	Alarm memory has been activated, indicating that this device triggered alarm within the group. LED stops blinking after 72 hours. Short press the Test/Hush to snooze the LED indication for 10 hours.
Red LED blinks 3 times per second.	1. Check the wiring connection between 2 or more devices. 2. Correct the wiring as per the wiring diagram.
When Test/Hush button is pressed for 3 seconds alarm sounds briefly	The device is in normal working condition. Test regularly to ensure proper operation.
When Test/Hush button is pressed for 3 seconds alarm does not sounds	The device may not be working correctly. Check and ensure that the Green LED is ON and the Red LED blinks every 40 seconds. If the problem persists, the device must be replaced by a licensed electrician.
Device does not produce alarm sound when tested	1. Ensure that device is mounted correctly and connected to the main power supply. 2. Press Test/Hush button until an alarm sounds. Do not press consecutively. 3. If the problem persists or if you have questions about the warranty, contact customer care center.
Device beeps and yellow LED blinks every 40 s	Battery may be low or drained. The device must be replaced by a licensed electrician.
Device beeps twice and yellow LED blinks twice every 40 s	1. Clean the device. Refer to Maintenance section. 2. If the problem persists or if you have questions about the warranty, contact customer care center.

Alarm sounds unexpectedly without smoke or steam	1. Press Test/Hush button to pause the alarm sound. Interconnected device stops alarming within 5 to 10 s. 2. Clean the device. Refer to Maintenance section. 3. Reinstall the device and test. 4. If the problem persists or if you have questions about the warranty, contact customer care center. Note: After an alarm event, the device that has blinking Standby LED every 2 s is the one that was triggered. Identify the device and follow steps 3 to 5.
Interconnected alarms do not alarm when in test or alarm function	1. Check the wiring connection between 2 or more devices. 2. Ensure that the two RF devices do not have a wired interconnection.

Maintenance

The device is required to be inspected monthly to ensure it is free from dirt, dust and insects. The alarm can be vacuumed or brushed with a soft brush to remove dust, dirt or kitchen grease that has accumulated. Apply a small amount of insect surface spray to a cloth and wipe around alarm/s every 3-6 months to mitigate insect ingress.

Important: Always test the device after cleaning.

⚠

WARNING

EQUIPMENT MALFUNCTION

- Test the device regularly to ensure its functionality.
- The device must be replaced by a licensed electrician after 10 years from the date of service.
- Do not open the device casing or repair yourself. There are no serviceable parts inside.

Failure to follow these instructions can result in death, serious injury or equipment damage.

Technical data	
Power Supply	220-240 V a.c., 50 Hz
Back up Battery Life	10 years
Operating Current	Average current ≤ 95 mA
Application Area	Indoor use only
IP rating	IP20
Sensing Type	Temperature sensor
Storage Temperature	-20 °C to 65 °C
Operating Temperature	0 °C to 45 °C
Alarming Temperature	54 °C to 62 °C
Storage Humidity	0% to 90%, non - condensing
Ambient Humidity	0% to 90%
Cable Interconnection	Max. 40 devices up to 150 m
Terminal Provisions	Active, Neutral, Earth/Loop and Interconnect terminals, each accommodates 2 × 1.5 mm² or 1 × 2.5 mm²
Horn Level	85 dBA at 3 m
Mounting Type	Mounting on ceiling and wall only
Dimensions	Ø 140 × 43.5 mm
Standard	AS 1603.3: 2018
RF Range	Indoor 50 m line of sight
RF	AS/NZS 4268 AS/NZS 2772.2
Certification	RCM Activfire SAI Global

Trademarks

Certified Product

✓TM

Australian Standard

AS 1603.3: 2018

Lic: SMK41555

SAI Global







We warrant this product for 10 years. For more information, contact customer care center.

Schneider Electric (Australia) Pty Ltd
33-37 Port Wakefield Road, Gepps Cross SA 5094
Customer Care: 13 73 28
Email: customercare.au@schneider-electric.com
www.schneider-electric.com.au

Schneider Electric (NZ) Ltd
Level 2, Building 6, 64 Highbrook Drive,
East Tamaki, Auckland 2013, New Zealand
Customer Care: 0800 741 303
Email: sales@nz.schneider-electric.com
www.schneider-electric.com